

## Wall Safes

### Wall Safe Digital Lock Instruction



Model: **S-W-181302**

To open the safe, the factory combination is "1,2,3." Open the door as follows:

1. Press \*
2. The red lamp will light.
3. Enter 1 2 3 #
4. The green lamp will light.
5. Open the door before the green lamp goes out.

#### **Changing the Combination:**

1. Enter the combination to open the door.
2. Insert your finger into the changing hole located at the back of the door and press the changing switch.
3. The green lamp will light.
4. Enter the new combination. Begin the new combination with the \* sign and end the combination with the # sign (Example: \* 1 2 3 #). You must enter the combination before the red lamp goes out (10 seconds). Three consecutive tones will sound from the lock, indicating input is completed.
5. With the door open, press the new combination again (Example: \* 1 2 3 #). The green lamp will light and one tone will be heard, confirming the combination is working.

#### **Lockout Feature:**

For added security, if a wrong combination is entered three times, the lock will not allow entry of any combination for three minutes. If a key is pressed during that three minutes, the lockout timer restarts and is in effect for the three minutes following. After the three minutes is over, you will hear 1 beep sound, and the combination may be entered again.

#### **Battery Replacement:**

If three tones are heard upon opening the safe door, it is time to replace the batteries with four fresh AA size alkaline batteries.