


CAM DISC HANDING

LOOKING AT THE EDGE OF THE DOOR DETERMINE ON WHICH SIDE THE HANDLE, OR OTHER OPERATOR IS TO BE INSTALLED.

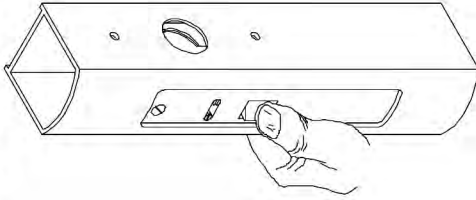

ON THIS SIDE

THE CAM DISC MUST BE HANDED AS SHOWN BELOW.



ON THIS SIDE


THE CAM DISC MUST BE HANDED AS SHOWN BELOW.



INSTRUCTIONS FOR CHANGING HAND OF CAM DISC


STEP 1

REMOVE THE RETAINER CLIP

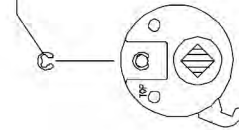


STEP 2

DO NOT REMOVE THE DRIVER PIECE.

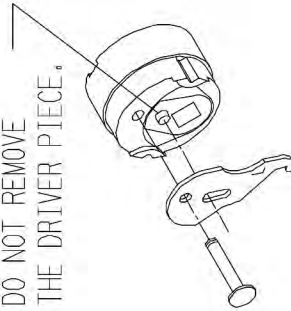

PULL THE CAM PIVOT PIN OUT OF THE CAM DISC AS SHOWN.

STEP 3

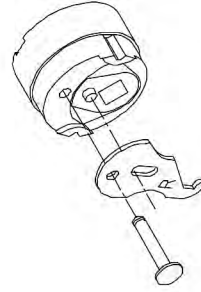

TURN THE CAM OVER AND PUSH THE CAM PIVOT PIN THRU THE CAM AND INTO THE CAM DISC AS SHOWN.

STEP 4

SNAP THE RETAINER CLIP INTO THE GROOVE ON THE CAM PIVOT PIN.

